

APPENDIX RA-3

BACK MOUNT GAGE INSTALLATION INSTRUCTIONS

1. At the desired location, drill two .52 INCH (13.10 mm) diameter holes in tank wall corresponding to mounting centers of gage. **FIG. A.**
2. Remove burrs from holes to provide good sealing surfaces. **FIG. A.**
3. Install gage to tank - Make sure O-rings are set properly in recess provided, either in gage body or in sealing spacer sleeve, (outside of tank wall between gage and tank.)
4. Tighten mounting nut with a socket wrench. Torque mounting nut to 60 in-lbs (6.78N-m). It is not necessary to over compress seals to make a liquid tight seal. **FIG. B.**
5. Gages 3.00 inches through 12.00 inches (76.20mm through 304.80 mm) centers inclusive have tank seals recessed in gage body -Gages 13.00 inches through 20.00 inches (330.20 mm through 508.00 mm) centers inclusive are furnished with sealing spacer sleeves. **FIG. B.**

FIG. A


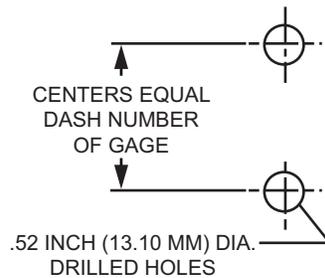


FIG. B

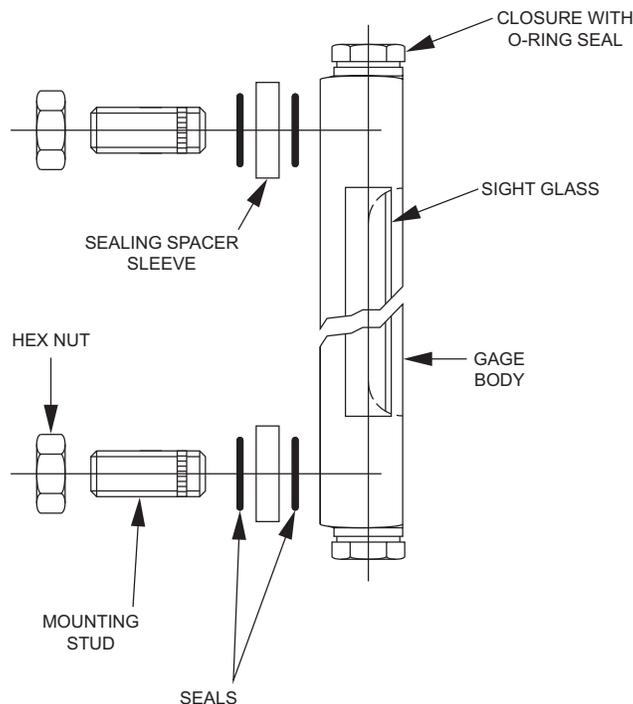

Dimensions and specifications are subject to change without notice. Not all items are Made-To-Stock, contact us for availability.

ES327-100
02/14

Ph : 920-682-6877
Fx : 920-684-7210



sales@ldi-industries.com
www.ldi-industries.com